


ASSEMBLY INSTRUCTION

716/717/718/719-HO111C CORNER FILLER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify, count all parts and compare with the parts list below:

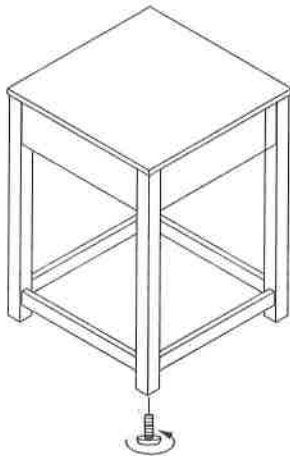


NO	HARDWARE		Q'TY
1		Ø $\frac{1}{4}$ "X19mm Flat Washer	8
2		Ø $\frac{1}{4}$ "X13mm Spring Washer	8
3		Ø $\frac{1}{4}$ "X2"L Bolt	8
4		Ø $\frac{1}{4}$ " Allen Wrench	1
5		Ø8"*1 $\frac{1}{2}$ " Screw	8

Step 1

Note: Don't tighten bolts before stretchers installed.

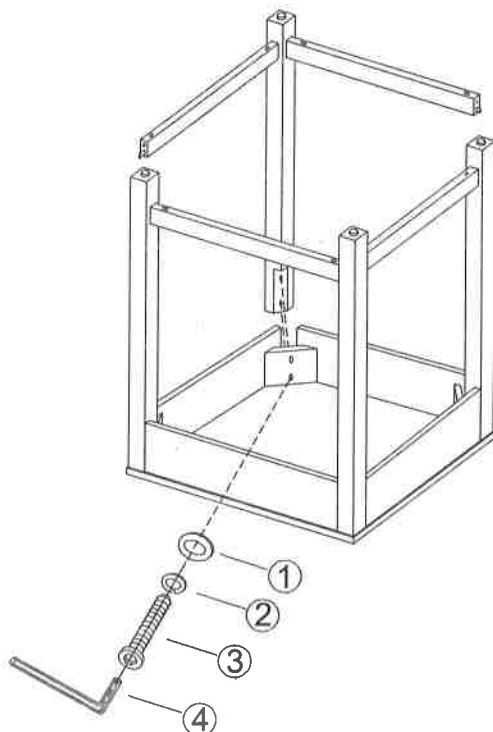

Step 2

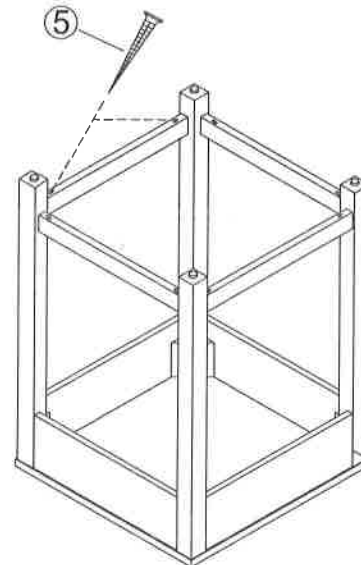

Cleaning Instructions: Clean the goods surface with furniture polish and a soft cloth.